





## 日本語

### ■ 同梱品の確認

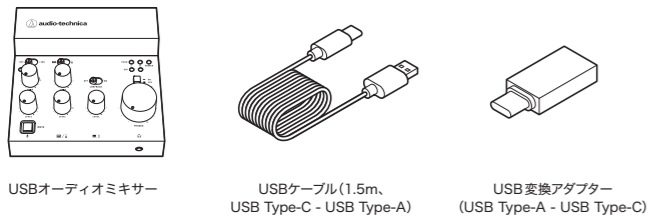


### ■ 各部の名称

#### ■ 天面

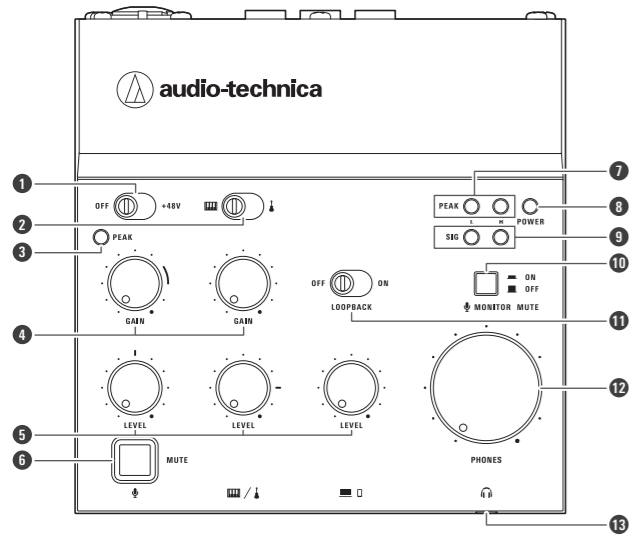


- |                  |                     |
|------------------|---------------------|
| 1 ファンタム電源スイッチ    | 4 電源インジケータ          |
| 2 ライン入力切替スイッチ    | 5 シグナルインジケータ        |
| 3 入力ピークインジケータ    | 6 マイクモニタミュート(消音)ボタン |
| 4 ゲイン調整ノブ        | 7 ループバックスイッチ        |
| 5 レベル調整ノブ        | 8 ヘッドホン音量調整ノブ       |
| 6 マイクミュート(消音)ボタン | 9 ヘッドホン出力端子         |
| 7 出力ピークインジケータ    |                     |

#### ■ 背面

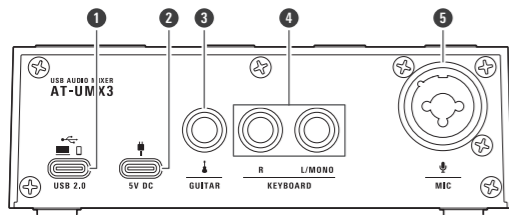

- |                         |                     |
|-------------------------|---------------------|
| 1 USB 端子                | 4 ライン入力端子 (Hi-Z 対応) |
| 2 USB 電源端子              | 5 マイク入力端子           |
| 3 ライン入力端子 (4) (Hi-Z 対応) |                     |

### ■ 入力ごとの設定・調整について


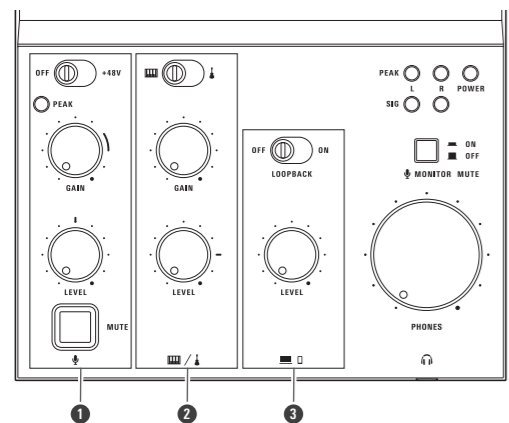


- |               |
|---------------|
| 1 マイク入力の設定・調整 |
| 2 ライン入力の選択・調整 |
| 3 USB入力の設定・調整 |

### ■ 接続のしかた

- 接続する際は、マイクや楽器などすべての機器の電源をOFFにしてください。
- スマートフォン/タブレットを接続する場合のみ、USB電源端子(USB Type-C) (5V DC)の接続が必要です(パソコンと接続する場合はパソコンから電源供給されます)。この場合、必ずUSB端子にスマートフォン/タブレットを接続してからUSB電源端子の接続を行ってください。

接続例:

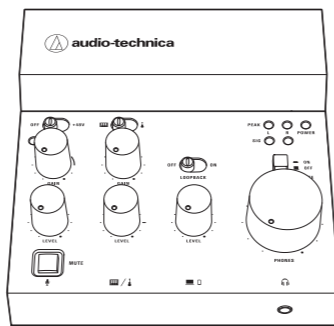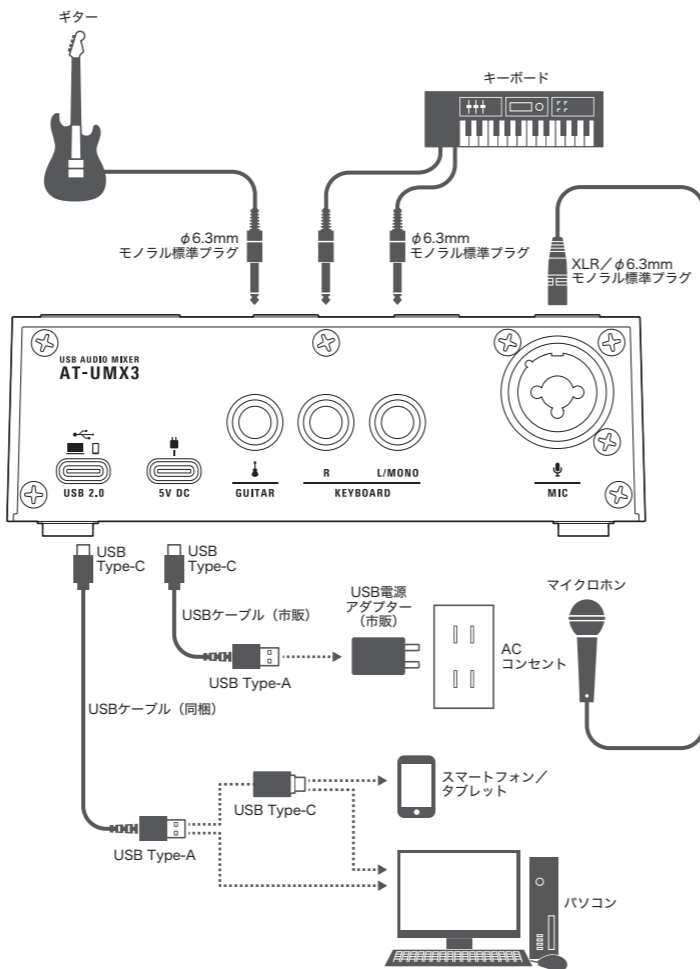


### ■ 使いかた

- 本製品のボタンが押されていないこと、スイッチがOFF側になっていることを確認します。
- 本製品の音量調整ノブ(GAIN, LEVEL, PHONES)と接続機器の音量をすべて最小にします。
  - 本製品の音量調整ノブはすべて左に回してください。
- 接続機器の電源を入れます。
- 付属のUSBケーブルを使用して本製品をパソコンなどに接続し、本製品の電源をONにします。
  - 電源インジケータ(POWER)が点灯します。
  - パソコンではなく、スマートフォン/タブレットと接続する場合は、スマートフォン/タブレットをUSB端子に接続してから、市販のUSB電源アダプターをUSB電源端子に接続してください。その際、USB電源アダプターを先に接続すると、スマートフォン/タブレットが認識されない場合があるため、必ずスマートフォン/タブレットを接続してからUSB電源アダプターを接続してください。
- マイク入力端子にマイクロホンを接続している場合は、マイク入力の「GAIN」を2時~3時の位置に、「LEVEL」を12時の位置まで回します。
  - コンデンサーマイクを接続しているときは、ファンタム電源スイッチを「+48V」にしてください。
- ライン入力端子にギターやキーボードなどの楽器を接続している場合は、LINE入力の「GAIN」を12時の位置に、「LEVEL」を3時の位置まで回します。
  - 接続している楽器に応じて「ライン入力切替スイッチ」でギター/キーボードの切り替えを行ってください。
- マイクや楽器、スマートフォン/タブレットまたはパソコンなどから音を出しながら、それぞれの「GAIN」と「LEVEL」を適切な音量になるよう調整します。
  - マイク入力/ライン入力の場合、まずは「GAIN」を調整し、その後スマートフォン/タブレットまたはパソコンから流れている音を確認しながら「LEVEL」を調整してください。
  - USB入力の場合、スマートフォン/タブレットまたはパソコンから音を出しながら「LEVEL」のみを調整してください。
  - スマートフォン/タブレットまたはパソコンなどで再生している音声配信したいときは、ループバックスイッチをONにしてください。
- ヘッドホン使用時は、「PHONES」でモニター時の音量を調整します。


## English

### ■ Package contents

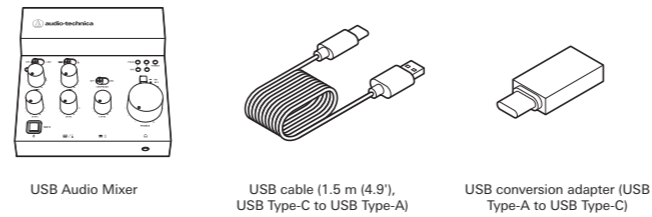


### ■ Part names

#### ■ Top view

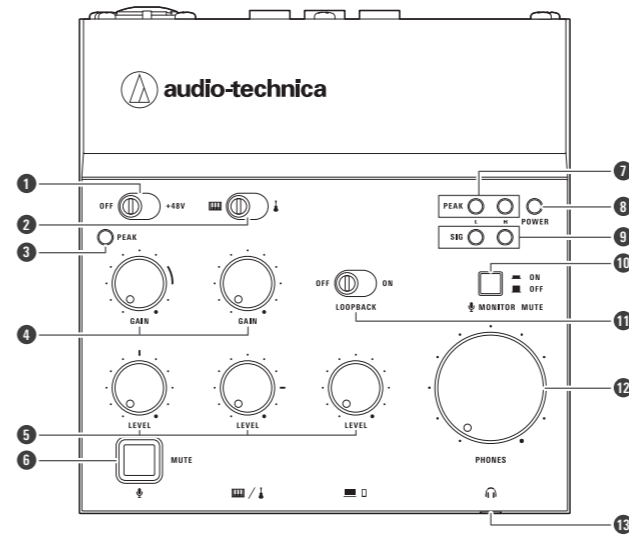


- |                              |                                  |
|------------------------------|----------------------------------|
| 1 Phantom power switch       | 6 Power indicator lamp           |
| 2 Line input selector switch | 7 Signal indicator lamp          |
| 3 Input peak indicator lamp  | 8 Microphone monitor mute button |
| 4 Gain control knob          | 9 Loopback switch                |
| 5 Level control knob         | 10 Headphone volume control knob |
| 6 Microphone mute button     | 11 Headphone output jack         |
| 7 Output peak indicator lamp |                                  |

#### ■ Rear view

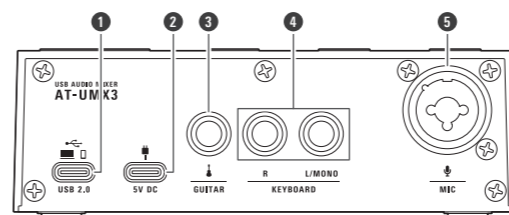

- |   |                                     |
|---|-------------------------------------|
| 1 USB port                              | 4 Line input jack (Hi-Z compatible) |
| 2 USB power port                        | 5 Microphone input jack             |
| 3 Line input jack (4) (Hi-Z compatible) |                                     |

### ■ Input settings and control



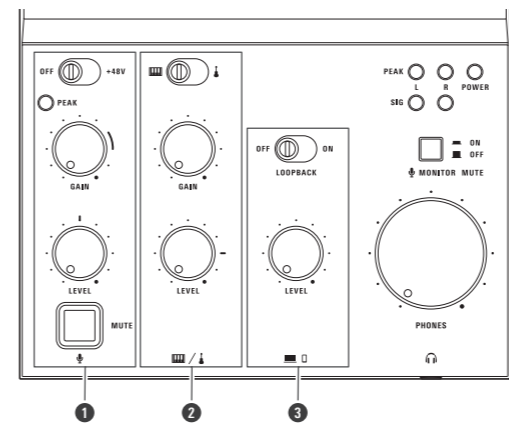


- |   |
|---|
| 1 Microphone input settings and control |
| 2 Line input selection and control      |
| 3 USB input setting and control         |

### ■ Connection procedure

- Before making connections, turn off all devices including microphones and musical instruments.
- The USB power port (USB Type-C, 5 V DC) is only used when connecting a smartphone or tablet (When connecting to a computer, power is supplied by the computer). In this case, be sure to connect the smartphone or tablet to the USB port first, and then connect the USB power port.

Connection examples:

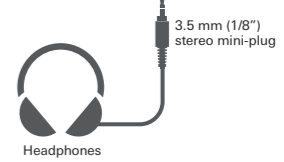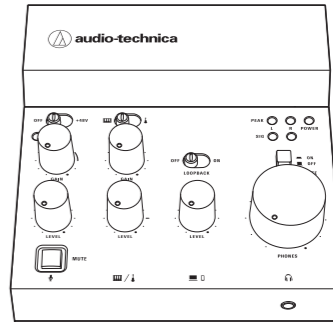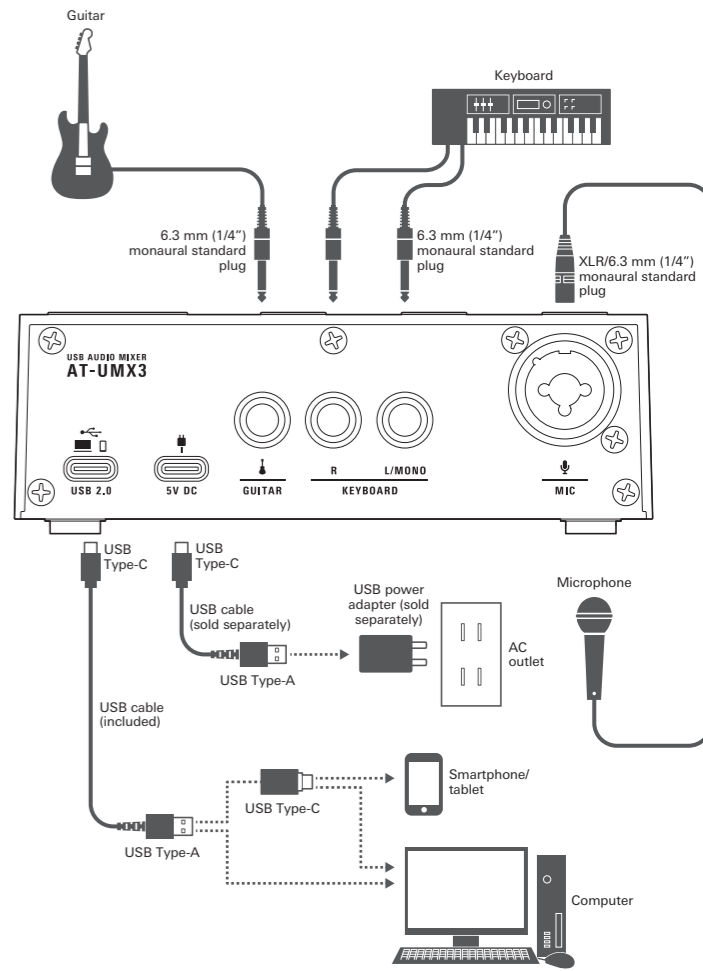

### ■ Using the product

- Confirm that no buttons on the product are being pressed and that all switches are in the OFF position.
- Turn the product's volume control knobs (GAIN, LEVEL, PHONES) and the volume of all connected devices to the lowest level.
  - Turn all the product's volume control knobs to the left.
- Turn on all connected devices.
- Connect the product to a computer using the included USB cable and turn on the product.
  - The power indicator lamp (POWER) lights up.
  - If connecting to a smartphone or tablet instead of a computer, connect the smartphone or tablet to the USB port, and then connect a USB power adapter (sold separately) to the USB power port to supply power. If the USB power adapter is connected first, the smartphone or tablet may not be recognized, so be sure to connect the smartphone or tablet first before connecting the USB power adapter.
- When connecting a microphone to the microphone input jack, turn the microphone input GAIN to the 2 or 3 o'clock position and LEVEL to the 12 o'clock position.
  - When connecting a condenser microphone, set the phantom power switch to +48 V.
- When connecting an instrument such as a guitar or keyboard to the line input jack, turn the LINE input GAIN to the 12 o'clock position and LEVEL to the 3 o'clock position.
  - Depending on the connected instrument, use the line input selector switch to switch between the guitar and keyboard.
- While outputting sound from sources such as a microphone, instrument, smartphone/tablet, or computer, adjust the GAIN and LEVEL of each source to the appropriate volume.
  - In the case of microphone or line input, first adjust the GAIN before adjusting the LEVEL while checking the sound coming from the smartphone/tablet or computer.
  - In the case of USB input, adjust only the LEVEL while outputting sound from the smartphone/tablet or computer.
  - To stream the audio being played on the smartphone/tablet or computer, turn the loopback switch to ON.
- When using headphones, adjust the monitoring volume using the PHONES knob.